


86-GS4-4599-00 MAIN FRAME (GS-400)

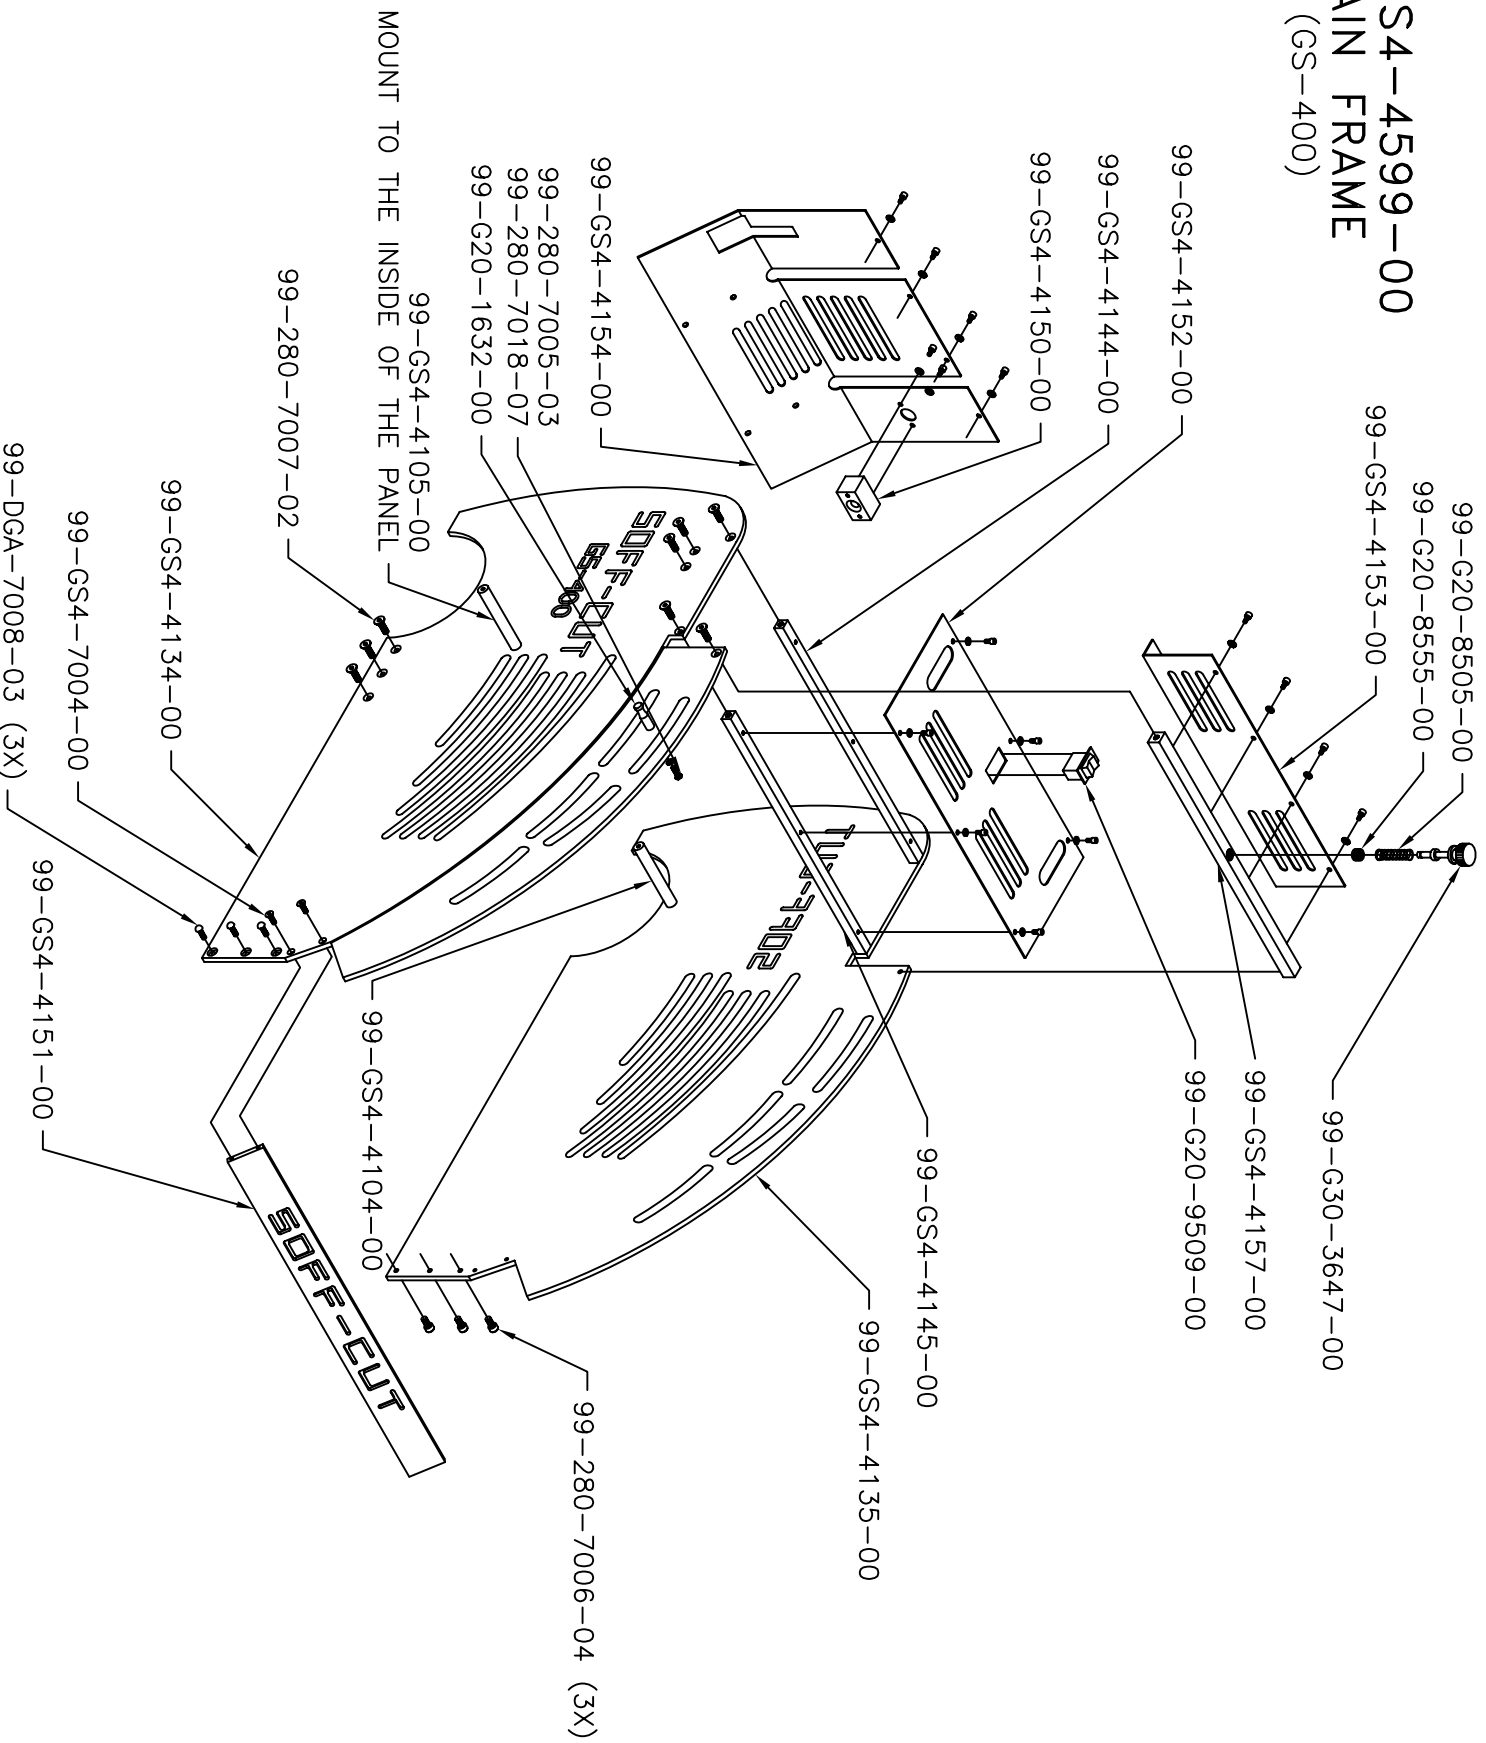

MAIN FRAME

86-GS4-4599-00

PART #	DESCRIPTION	QTY
99-280-7005-03	H.H. 1/4-20 X 3/4	1
99-280-7006-01	SHCS, #10-32 X 3/8	19
99-280-7006-04	SHCS, 1/4-20 X 3/4 SST	3
99-280-7007-02	FHS, 1/4-20 X 3/4 SST	19
99-280-7012-01	NYLOC, 10-24	3
99-280-7012-02	NUT, 1/4-20 NYLOC	1
99-280-7017-02	WASHER, 1/4" SST FLAT	1
99-280-7018-07	LOCK WASHER, 1/4" SPLIT SST	6
99-280-7018-09	LOCK WASHER, #10 SPLIT SST	19
99-DGA-7008-03	BUTTON HEAD, DGA TO MOUNT FRONT PLATE	3
99-G20-1632-00	STOP, GUIDE ARM	1
99-G20-7501-01	WASHER, 3/8 FLAT	2
99-G20-7505-07	H.H. 3/8-16 X 1.25	2
99-G20-7507-03	FHS, 10-24 X 1.25	1
99-G20-7509-03	WASHER, 3/8 SPLIT	2
99-G20-8505-00	SPRING, HOOD KNOB #29	1
99-G20-8555-00	THREADED INSERT	1
99-G20-9509-00	SWITCH, ON/OFF	1
99-G30-3647-00	KNOB, HOOD	1
99-G30-7506-08	FHS, 10-24 X 3/4	1
99-GS4-4104-00	BAR, LEFT SIDE PLATE SUPPORT	1
99-GS4-4105-00	BAR, SIDE PLATE SUPPORT	1
99-GS4-4134-00	SIDE PLATE, RIGHT	1
99-GS4-4135-00	SIDE PLATE, LEFT	1
99-GS4-4144-00	CROSS BAR, PANEL SUPPORT	1
99-GS4-4145-00	CROSS BAR, CONTROL PANEL	1
99-GS4-4150-00	BLOCK, PULL ROPE GUIDE	1
99-GS4-4151-00	EMBLEM	1
99-GS4-4152-00	PANEL, LEVER ACCESS	1
99-GS4-4153-00	PANEL, REAR HOOD COVER	1
99-GS4-4154-00	PANEL, REAR	1
99-GS4-4157-00	CROSS BAR, HOOD KNOB	1
99-GS4-9509-00	FHS, #8-32 X 1/2	4