


87-G42-3699-09 SWITCH PANEL (GX-4200)

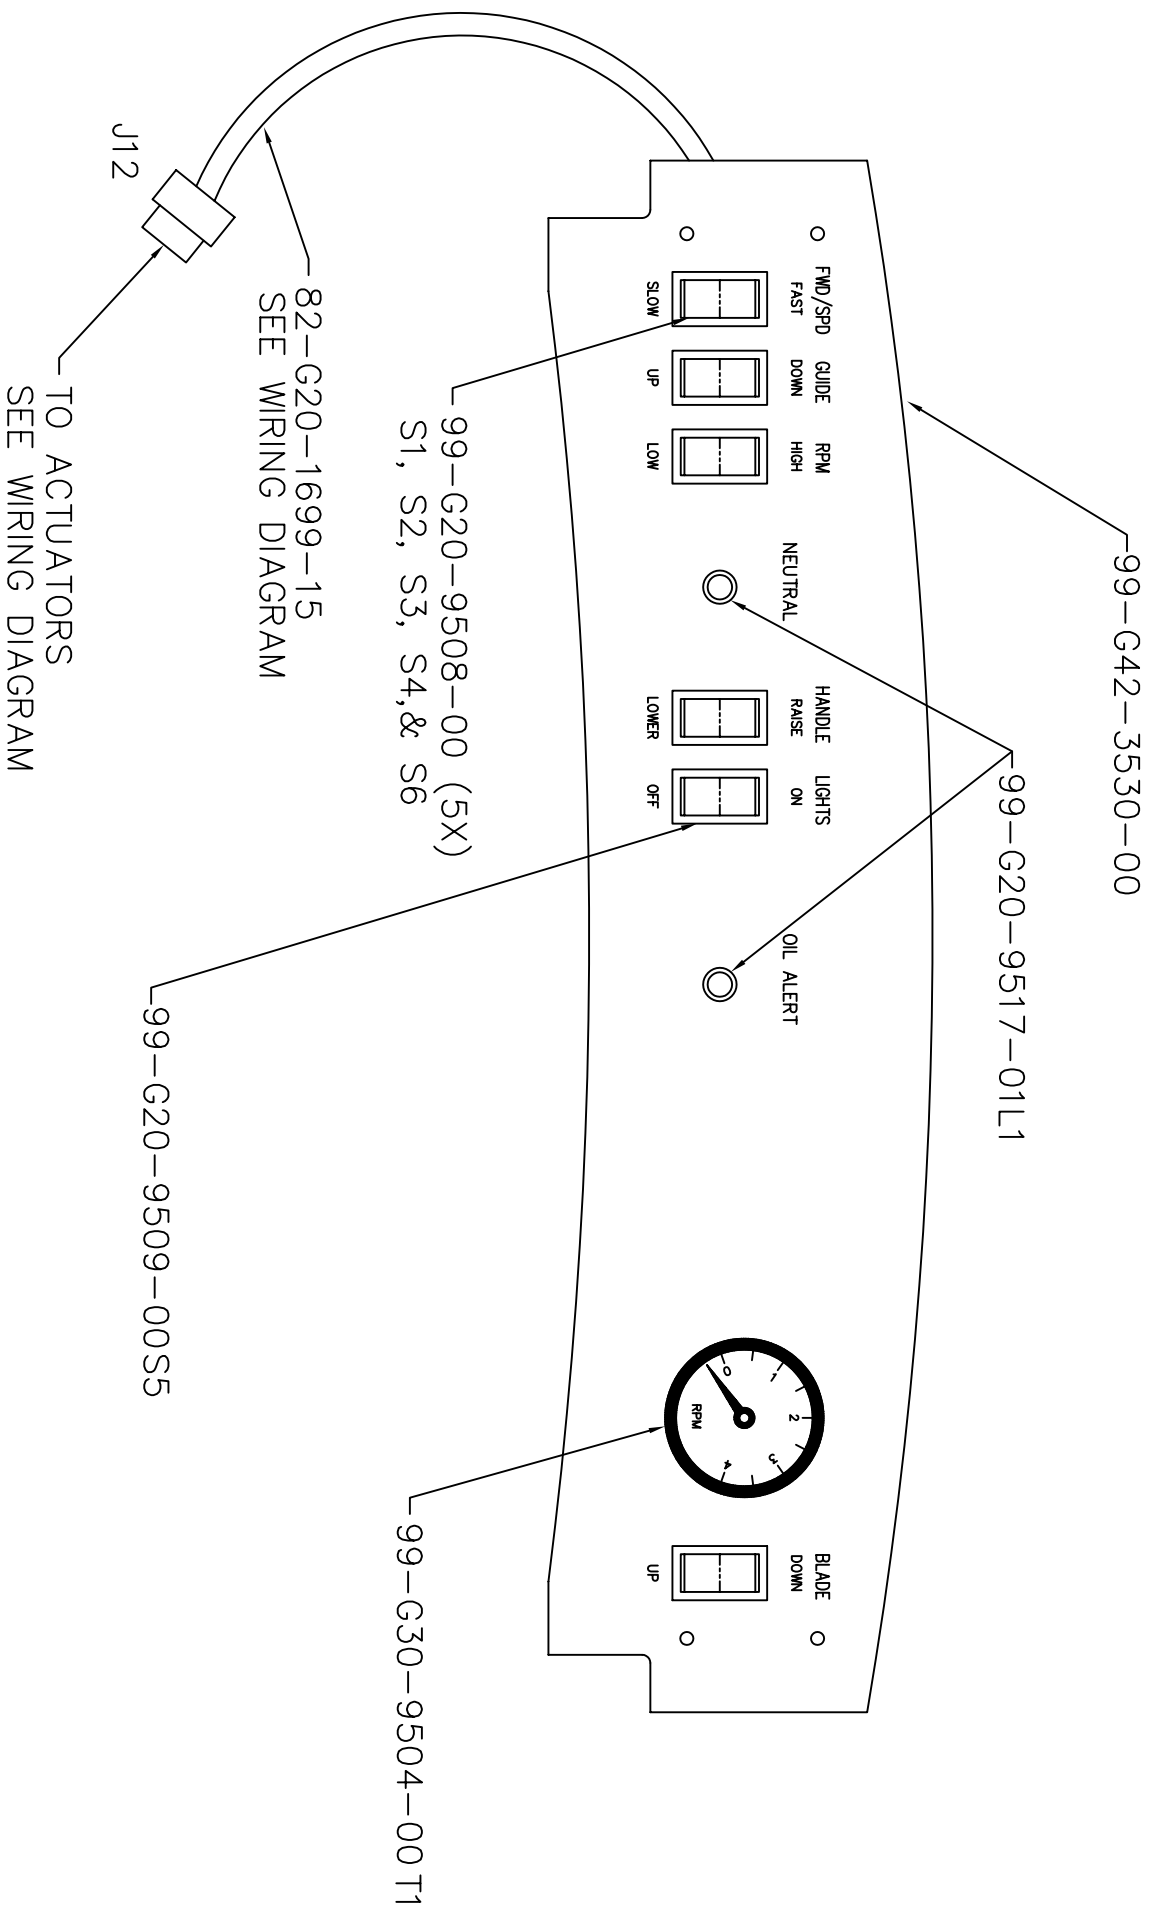

SWITCH PANEL
87-G42-3699-09

PART #	DESCRIPTION	QTY
99-G20-7511-01	LOCK WASHER #8 EXT. TOOTH	9
99-G20-7513-11	NUT, NYLOC 8-32	5
99-G20-9508-00	SWITCH, ACTUATOR	5
99-G20-9509-00	SWITCH, LIGHT	1
99-G20-9517-01	LIGHT, LED RED	2
99-G20-9520-00	DISCONNECT, MALE (.250)	4
99-G30-9504-00	TACHOMETER, GX3000	1
99-G42-3530-00	PANEL, SWITCH DASH	1